



GRP BUILT OFF-SITE.
SAVE TIME ON-SITE.

Roofline

Apex Finial

Installation Instructions




www.stormking.co.uk

Roofline

Apex Finial

STORMKING[®]

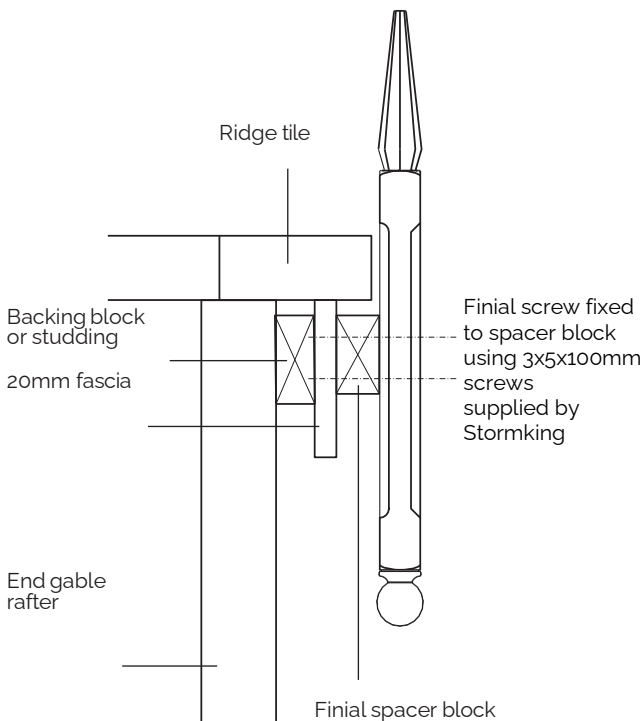

Finial screw fixed to spacer block using 3x5x100mm screws supplied by Stormking

Finial spacer block fixed to suitable grounding 20mm fascia or internal studding using suitable fixing depending on location and exposure to elements.

(if not available add suitable backing block)

Technical helpline:

01827 311100

www.stormking.co.uk

